




CONE Bluetooth® Speaker

INTRODUCTION

Dear Customer, Thank you for choosing a RAIKKO® product.

The RAIKKO® Cone Bluetooth® is a mobile speaker system. It transmits audio signals through a Bluetooth® or cable (3.5 mm jack) connection.

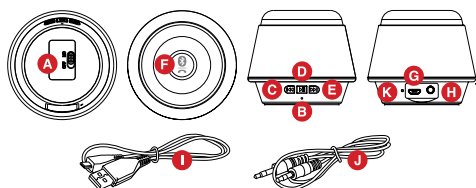

OVERVIEW

- | | |
|--------------------------------|--|
| A On/off switch | G Charging socket (Micro USB) |
| B Microphone | H Line IN socket (3.5 mm) |
| C Volume-/Back | I USB charging cable |
| D Play/Pause | J 1 line IN cable (3.5 mm jack) |
| E Volume +/-/Forward | K LED display |
| F Pairing / Answer call | |

IN THE BOX

1 RAIKKO® Cone Bluetooth® Speaker, 1 USB charger cable, 1 line IN cable (3.5 mm jack), 1 carrying pouch

SWITCHING ON/OFF

Slide the switch (**A**) to the right (ON) to turn the speaker on.
Slide the switch (**A**) to the left (OFF) to turn the speaker off.

CAUTION!

The speaker is automatically in Bluetooth® mode when switched on. If a device that has already been connected is within range, it will connect automatically.

CONNECTION VIA BLUETOOTH®



After being switched on, the device will be in "pairing mode". Activate the Bluetooth® interface on your audio device (**M**) and pair the speaker with it.

If there is a Bluetooth®-enabled device within range that has already been paired with the speaker, this will be connected first. Disconnect this device if required and connect another Bluetooth®-enabled device.

For additional information please consult the user manual for your device (**M**).

The maximum range of the wireless signal is 10 m.

Large obstacles, such as furniture, walls and electronic devices, can limit the range.

CAUTION!

It is not possible to pair multiple devices at the same time. Only one audio device can access the speaker at any given time.

CONNECTION BY CABLE

To play audio in cable mode, connect the Line IN cable (**J**) into the appropriate speaker socket (**H**).

Connect the other end of the cable to the headphone output on your audio device (**M**) or to the audio output on a computer/laptop (**N**).

CAUTION!

Playback via Bluetooth® connection stops automatically when a cable is inserted. If the cable is removed, playback through Bluetooth® may be restarted (if an audio device is paired).

AUDIO PLAYBACK

The playback function on the audio device can be controlled remotely from the speaker if the audio device supports this feature.

Operation using the speaker's function keys:

Press key (**D**) once briefly to start or stop playback.

Press key (**E**) once briefly to change to the next track.

Press key (**C**) once briefly to restart the current title from the beginning, or repeatedly to switch to previous tracks.

CAUTION!

In cable mode, audio can only be played back (play/pause, next/previous track) through the connected audio device.

VOLUME

When the speaker is switched on, the volume will be set to a medium level. The volume can be controlled using the volume control function on your audio device or directly using the keys on the speaker.

Hold down the + key (**E**) to increase the volume.

Hold down the - key (**C**) to decrease the volume.

CAUTION!

It is possible to overload the speakers with a high signal level. Choose a volume level that will not distort the sound.

SPEAKERPHONE/ANSWERING/ENDING CALLS

The speaker has a built-in microphone. When using a Bluetooth®-enabled mobile phone, you can use the speaker-phone function.

To answer a call, press the phone key (**F**) briefly (marked with a phone symbol). To end a call, press the phone key (**F**) again (marked with a phone symbol). Reject calls by holding down the phone key (**F**).

CHARGING THE INTEGRATED BATTERY

Charge the speaker completely before using it for the first time. The first charge cycle can take up to 3 hours. Connect the speaker to the USB port on a PC/MAC™ or a USB mains adapter to charge it.

Use the connection cable (**J**) provided.

Connect one end to the speaker's charging socket (Micro USB) (**G**) and the other end to the appropriate USB port.

The LED display (**K**) will turn red while charging.

The LED display (**K**) will turn off when the battery is fully charged.

A complete charge cycle will last approximately three hours.

TECHNICAL SPECIFICATIONS

Dimensions:	(L) 74 × (W) 74 × (H) 65 mm
Weight:	252 g
Music output:	5 watts RMS
Speaker:	45 mm diaphragm
Frequency range:	90 Hz–20 kHz
Battery type:	Lithium polymer
Charging voltage:	5 V (USB)
Connections:	1× Micro USB (charging socket), 1× Line IN (3.5 mm), Bluetooth® (wireless)
Bluetooth® Standard:	3.0 (A2DP, AVRCP)

WARNINGS AND SAFETY PRECAUTIONS

PLEASE READ BEFORE USE

All trademarks and trade names are the property of their respective owners.

Copyright 2014 by RAIKKO®

PRODUCT INFORMATION

- Design and specifications are subject to change without notice. This includes primary product specifications and the user manual. This user manual is a general reference guide for using the product.
- The accessories supplied may differ from the descriptions in this user manual. This is because accessories may vary from country to country and the associated technical requirements.
- The illustrations in this manual are for explanatory purposes only and may differ from the actual design of your device.
- The manufacturer accepts no liability for any errors or contradictory information contained in this user manual.

SAFETY INSTRUCTIONS

 Please make sure that you have thoroughly read and understood all warnings and safety precautions before using this product.

WARNINGS

 **If foreign objects or water have entered the device, turn it off and disconnect it from the power supply.** Continued use may cause fire or electric shock. Please contact your dealer or customer service department.

 **If the product has been dropped or the case has been damaged, turn it off and disconnect it from the power supply.** Continued use may cause fire or electric shock. Please contact your dealer or customer service department.

 **Keep the product out of the reach of children and pets.** It may contain small parts which can be swallowed.

 **Do not dismantle, modify or repair the product yourself.** There is a risk of fire or electric shock. Please contact your dealer or customer service department for repairs.

 **Only use the mains adapter supplied with the mains voltage specified. Otherwise, there is a risk of fire or electric shock.** Please familiarise yourself with the operating instructions in the user manual.

 **Do not use the device while you are walking or driving a vehicle.** You could trip or cause a road accident.

 **Please avoid extreme volume. Loud music can lead to ear damage.** Avoid extreme volume especially over long periods.

 **Do not hold the device too close to other people's ears or pets.** This may damage your hearing.

 **Please ensure that the product is not subjected to physical shock. This can damage the device or cause the liquid in the battery to leak.** If the liquid comes into contact with your eyes, skin or clothing, wash off immediately with clean water. If the liquid comes into contact with your eyes, seek medical help immediately.

SAFETY PRECAUTIONS

 **Do not use the device near water. There is a risk of fire or electric shock.** Take special care of your device during rain, snow, on the beach or near water.

 **Do not use the device near heat sources. There is a risk of fire or electric shock.** It is recommended that you do not place the device near candles, radiators or other appliances that generate heat.

 **Only place the device on stable surfaces.** The device may drop or topple over, resulting in damage.

 **The product is a technical device. Do not drop it or subject it to physical shock and always take good care of it.** Failure to do so may damage the device.

 **Do not expose the device to high humidity, large amounts of steam, smoke or dust.** There is a risk of fire or electric shock. Using the device under these conditions could lead to loss of power and a reduced lifespan of the device.



Do not cover the device, or place it on cloths or blankets. This could lead to heat build-up in the device and in turn to deformation of the case. In addition, there is a risk of fire. Use the device only in well ventilated areas.



Do not leave the device in an area where the temperature may rise rapidly (e.g. in a vehicle). This could damage the case and parts inside the equipment which in turn could cause a fire.



Disconnect all cables prior to transporting the device. Otherwise the cables may be damaged which could result in risk of fire of electric shock.



Clean the device with a clean, dry cloth. Failure to do so may damage the device or allow liquid to get into the inside.



DECLARATION OF CONFORMITY

The CE Declaration of Conformity and all other obligatory information can be accessed at <http://www.RAIKKO.com/cert/>

WARRANTY

To activate the warranty period and to receive information about new products, please register your product at <http://www.RAIKKO.com/register/>
All you need is the serial number, which you will usually find on the frontside/underside of the product.

Your RAIKKO® product has been manufactured with great care and using high quality materials.



At the end of this product's service life, please dispose of it only at local or community collection points for electric or electronic devices. Never dispose of the product with household waste. Please think about our environment.

CUSTOMER SERVICE

Monday to Friday
from 09:00–18:00

Web www.RAIKKO.com
Email service@RAIKKO.com
Tel +49-7144-887641

(teleword, € 0.09/min fixed line, mobile network max. € 0.42/min)

RAIKKO.COM/FB

FIND
US ON



FACEBOOK
AND ON
YOUTUBE



RAIKKO.COM/YOUTUBE